
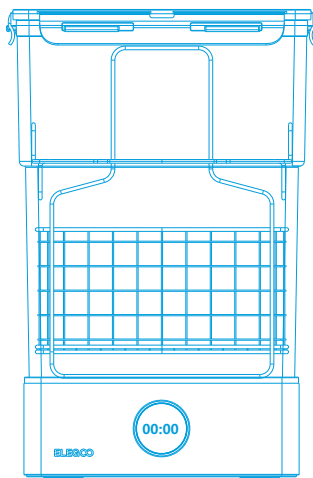


ELEGOO

● **Mercury
X Bundle**

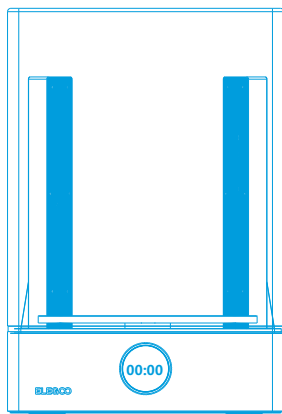

User Manual

Thank you for purchasing ELEGOO brand products.

V1

After receiving the product, please confirm whether the equipment is intact and the accessories are complete. If there is any damage or missing, please timely contact us at 3dp@elegoo.com. (To ensure the performance of each product, each product will undergo strict tests before leaving the factory. There may be some slight scratches when you receive the product, which is normal, please rest assured to use.)

Contents

Package List 01

Mercury X Wash Basic Parameters 02

Mercury X Cure Basic Parameters 03

Mercury X Bundle Operating Instructions 04


Mercury X Wash Operating Instructions 05

Mercury X Cure Operating Instructions 08

Machine Maintenance 10

Cautions 12


FAQ 14

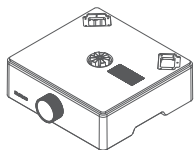


Main Body




Curing Light




Curing Turntable

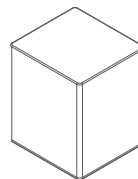

Anti-UV Lid

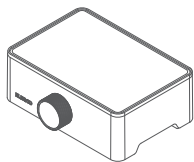


Main Body

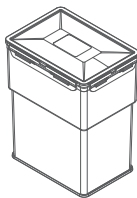

Cleaning Bucket



Cleaning Basket



Cleaning Basket
Bracket



Adapter



Tools



User Manual

Machine Name: ELEGOO Mercury X Wash

Time Setting: 0-30mins

Control Mode: knob and button control

Rated Power: 12W

Input Voltage: 100V-240V 50/60Hz

Machine Dimensions: 255mm*155mm*385.5mm

Machine Net Weight: 2.27kg


Cleaning Time Setting:

For model with a diameter less than or equal to 30mm, it is recommended to clean the model for 1 minute. And if the surface of the model is complex, it is recommended to increase the cleaning time appropriately.

Maximum Cleaning Volume:

180mm*121mm*153mm(Cleaning with platform)

201mm*124mm*255mm(Cleaning without platform)

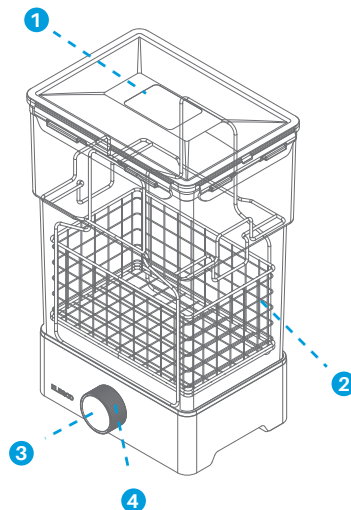

- | | |
|--------------------------------|----------------------------------|
| 1 Cleaning Bucket | 2 Cleaning Basket |
| 3 Display Screen On/Off Button | 4 Rotary Button For Time Setting |

Machine Name: ELEGOO Mercury X Cure

Timing: 0-30mins

Control Mode: knob and button control


Rated Power: 36W

Input Power: 100V-240V 50/60Hz

Machine Net Weight: 2.4kg

Cleaning Time: For model with a diameter less than or equal to 30mm, it is recommended to cure the model for 2 minutes. And if the surface of the model is complex, it is recommended to increase the curing time appropriately.

Maximum Curing Size: $\Phi 200\text{mm} \times 260\text{mm}$

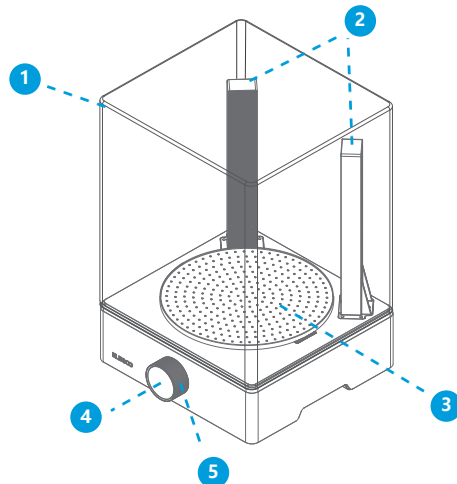

1 Anti-UV Lid


2 Curing Light

3 Curing Turntable

4 Display Screen On/Off Button

5 Rotary Button For Time Setting

Mercury X Wash and Mercury X Cure can work at the same time through the dedicated adapter that comes with the machine, and the operation mode of the two machines is the same. Please take off the blue protective film on the decoration belt of the machine before use.

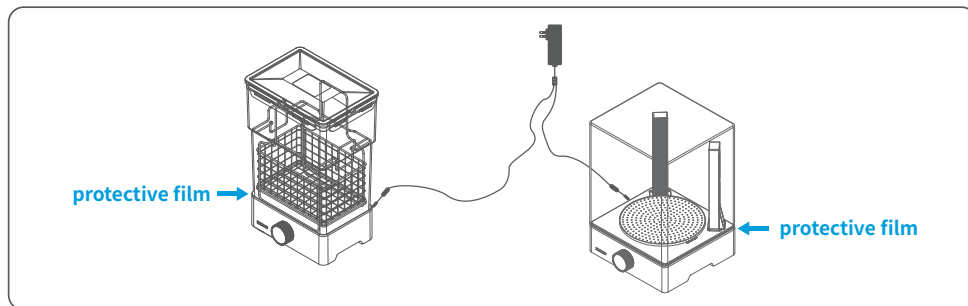


Rotary button for time setting:

Clockwise rotation to increase the time, counterclockwise rotation to decrease the time, and the maximum time is 30 minutes.

Indicative light ring:

The light ring flashes when the power is on, and after setting the time, the light will gradually go out as the screen time counts down.


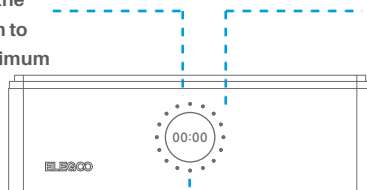


Display screen on/off button:

Long press the screen for 3s to turn on or turn off the screen, press the screen briefly to start or pause. After setting the time, the screen will display the time you set, and when the machine starts working, the time displayed on the screen will start counting down from the time you set until it goes to zero.


Mercury X Wash is designed for cleaning printed models. Please turn on the power first and then long press the button to start the machine.

1. Open the sealing lid of the cleaning bucket, add an appropriate amount of washing liquid (the washing liquid can exceed the model and the height of the washing liquid must not exceed the maximum scale), then place the cleaning bucket in the positioning slot on the machine platform.
2. Please submerge the model in a suitable way in the washing liquid of the cleaning bucket. (It is forbidden to put the model directly into the cleaning bucket for cleaning, otherwise, the model and the parts of the cleaning bucket will be damaged.)

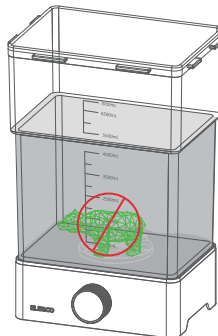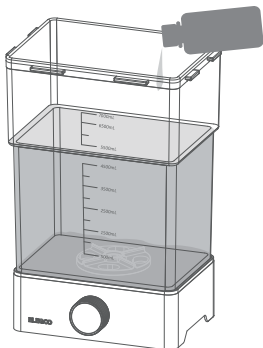

a: When the model is within the size of 180mm×121mm×153mm, you can wash the model with build platform. First remove the lid of the cleaning bucket, put the cleaning basket into the cleaning bucket, and then set the cleaning basket bracket into the cleaning basket until it stuck at the bending point of the cleaning basket, and then place the model with platform upon the bracket, (Be careful not to bump the model during placement.) and finally seal the lid.


(The Mercury X Wash machine supports Mars2 series and Mars3 models with platform cleaning, but it is necessary to remove the cleaning basket and use only the cleaning basket holder to clamp the platform, besides, two platforms can be cleaned simultaneously. However, it should be noted that since there is no restrictive measure for the Mars series build plate, the platform is easy to fall when placed unstably, so it is best to remove the model and put it in the cleaning basket for cleaning.)

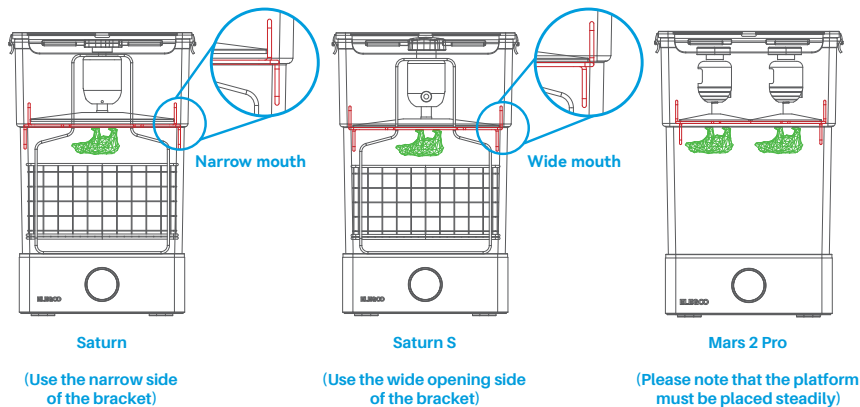


b: When the model is out of the size of 180mm×121mm×153mm, then you should clean the model without build platform. Please remove the lid of the cleaning bucket first, put the cleaning basket into the cleaning bucket without the bracket, take the model off the platform directly and put it lightly into the cleaning basket, and finally seal the lid. (Please be sure that the model is placed as flat as possible in the cleaning basket to prevent the sharp corners of the model from going over the grid at the bottom of the cleaning basket and hitting the wheels).

3. Turn the knob clockwise to set the cleaning time, and press the screen briefly to start cleaning the model.


4. The machine will beep when the cleaning is finished. Please take out the model for air-drying. After cleaning, please remove the cleaning bucket, take out the cleaning basket and cover the cleaning lid (the washing liquid can be used for several times). If the washing liquid spills on the machine body, please clean it up quickly to avoid short circuit caused by the washing liquid flowing into the machine body.

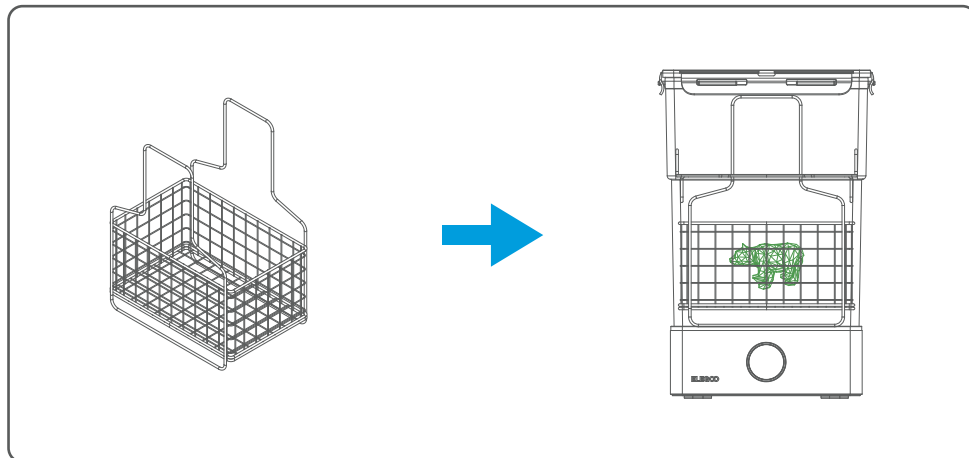

Mercury X Cure is specially designed for curing the printed model. For the first use, you need to install the curing lights on the machine by using the tools supplied with the machine. First insert the terminal of the lead wire from the machine shell into the interface below the curing lights, put the extra wires into the machine, and finally use the tools and screws supplied with the machine to fix the two curing lights respectively to the recess of the machine shell. Then turn on the power and long press the button to start the machine.

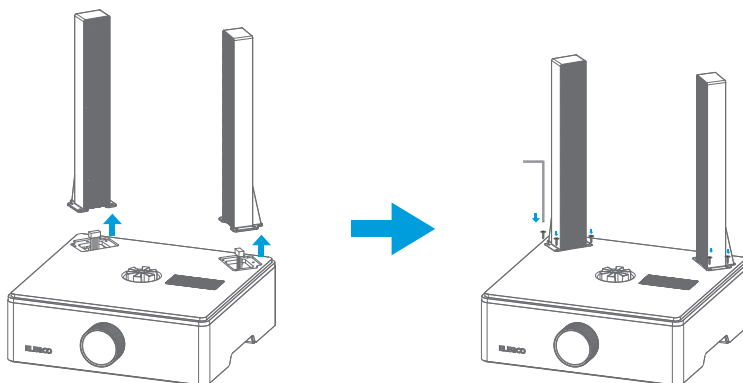


1. Align the curing turntable with the turntable positioning slot in the center of the body platform and place it tightly.
2. Place the air-dried model in the center of the curing turntable.
3. Put the anti-UV lid on. Turn the knob clockwise to set the curing time. Press the screen briefly to start curing the model. Due to the slow rotating speed of the turntable, there is slight shaking, which is a normal phenomenon.
4. The machine will beep when curing is completed.

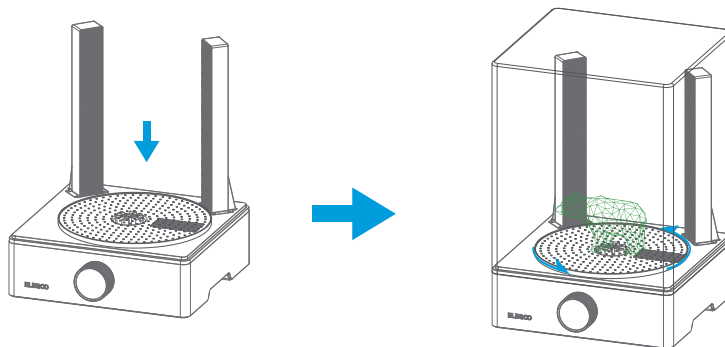


1. Recycling of washing liquid

When the washing liquid in the bucket is reused more than 30 times, we need to filter and clean the waste. First, leave the washing liquid to stand for about 10 hours, and then after the waste has settled to the bottom of the cleaning bucket, pour the washing liquid on the upper layer of the bucket into another container, then clean the waste at the bottom of the bucket (the waste would be converted into ordinary solid waste in sunlight), if necessary, the bucket rotor can be removed for cleaning.

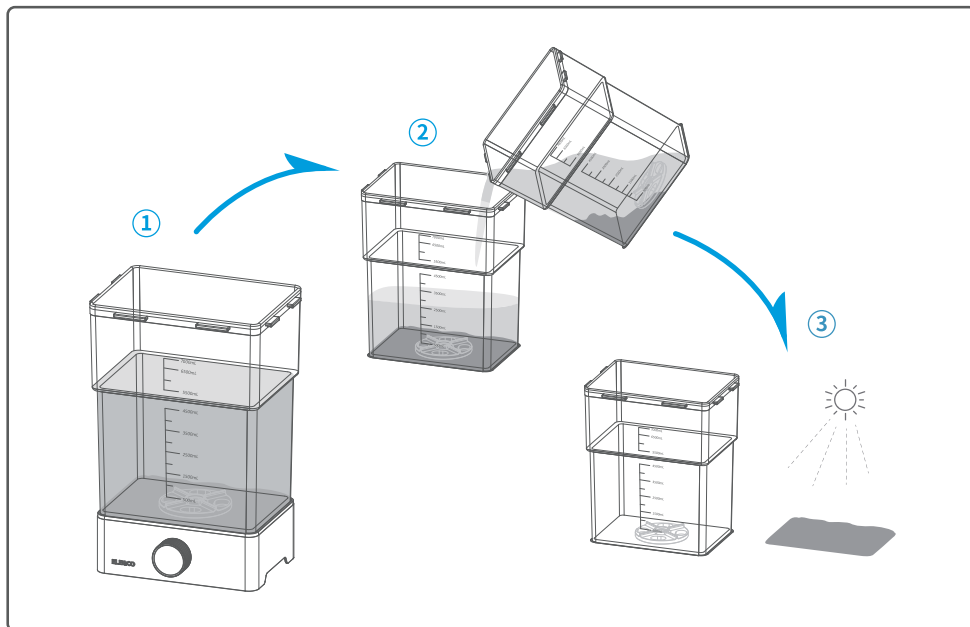

2. Clean the impeller of the cleaning bucket

After the cleaning bucket has been used for a period of time, the rotor at the bottom may rotate abnormally due to the sediment, then you can remove the rotor for cleaning.

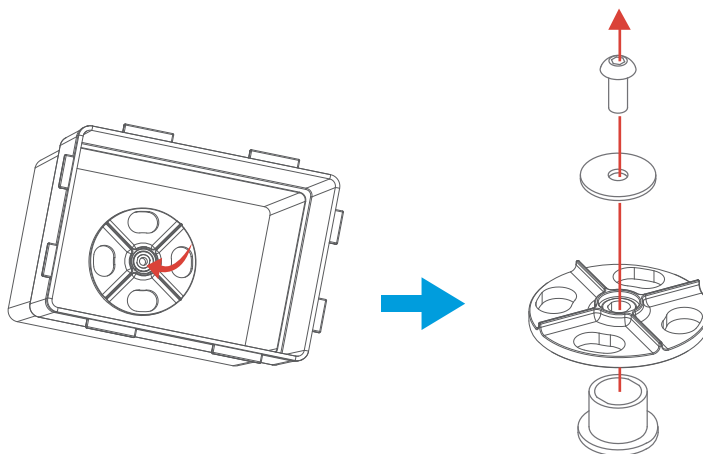

1. Please always keep in mind the following precautions when using the ELEGOO Mercury X Wash machine. Failure to observe these precautions may result in damage to the machine or even cause personal injury.

- Please contact our customer service first to arrange replacement if any parts are found damaged or missing after receiving the products.
- When using Mercury X Wash, do not place the model directly in the cleaning bucket for cleaning. Please put the model in the cleaning basket for cleaning.
- The cleaning bucket must be filled with cleaning liquid when the machine is running, otherwise the wave wheel will be stuck and may also lead to damage to the machine.
- Please follow the safety regulations to use and store the washing liquid properly. The washing liquid should not exceed the maximum height of the cleaning bucket, otherwise, the washing liquid may overflow and cause damage to the machine. Please seal the cleaning bucket with the lid after using.
- The ambient temperature of the ELEGOO Mercury X Wash machine is recommended to be 0°C to 40°C, and the humidity is 20% to 50%.
- Do not disassemble the ELEGOO Mercury X Wash machine without consulting. Please contact ELEGOO customer service: 3dp@elegoo.com if you have any questions.

2. Please always keep in mind the following precautions when using the ELEGOO Mercury X Cure machine. Failure to observe these precautions may result in damage to the machine or even cause personal injury.

- Please contact our customer service first to arrange replacement if any parts are found damaged or missing after receiving the products.
- Please wash and dry the model first before curing, otherwise, the model would be covered with some white residues, sticky and cracked.
- When the Mercury X Cure is running, do not take away the lid from the machine as to prevent potential hazards from the UV lights.
- After long-hour use of the Mercury X Cure machine, it is a normal phenomenon that the temperature of the machine body and the cover will rise.
- Please adjust the curing time appropriately if the model turns yellow after curing. Over curing will lead to the model yellowing.
- The ambient temperature of the ELEGOO Mercury X Cure machine is recommended to be 0°C to 40°C, and the humidity is 20% to 50%.
- Do not disassemble the ELEGOO Mercury X Cure machine without consulting. Please contact ELEGOO customer service: 3dp@elegoo.com if you have any questions.

1. The Mercury X Bundle does not work:

Poor power supply contact. Please re-plug the power supply. The anti-UV lid is not covered. Try again after covering the lid.

2. The model turn white after washing and curing:

The concentration of alcohol is not enough when using the Mercury X Wash machine.
Please use alcohol with a concentration greater than 95% for cleaning.

The model is not air-dried before being cured by the Mercury X Cure machine.
Please wait for the surface of the model to dry before curing.

3. The rotor of the cleaning bucket does not rotate when the Mercury X Wash machine is running:

The rotor might be caught by foreign matters. Please try again after taking the cleaning bucket down, pouring out the washing liquid, and removing the foreign matters.

There is too much precipitation in the washing liquid, please taking the cleaning bucket down first, and try again after cleaning the precipitation of the washing liquid or changing the washing liquid.

4. Abnormal sound occurs in the cleaning bucket when the Mercury X Wash is running:

The screw of the rotor is loose during the washing process. Please tighten the screw with tools.

- Telephone--0755-21005141
- Mailbox--3dp@elegoo.com
- Website--www.ELEGOO.com
- Address--101, No.30 Dahe Industrial Park,
Guancheng Community, Guanhu Street,
Longhua District, Shenzhen, China

ELEGOO